




**PL Medical’s dosimetry service is designed to provide valuable dose information for a facilities personnel monitoring program. A control badge is included in your shipment and is essential to the monitoring system. To obtain accurate data, it is important to observe the following regarding your control badge:**

The control badge is used to determine background radiation during transit and while the badges are at the clinic. The control badge reading is automatically subtracted from the individual employee badge readings during processing to obtain the occupational dose. Do **not** wear this control badge.

The control badge should be stored in the same location as the employee badges when they are not being worn. This should be outside the X-ray rooms, in an area free from radiation, liquid, high temperatures, and high humidity. Please keep in mind that radiation can pass through lead shielding so we recommend that you store your badges in an area far enough away from the radiation area as to avoid non-occupational radiation exposure to the control and employee badges. Do not store the control or the employee badges inside a drawer or any other covered container.

### **Badge Label Information**

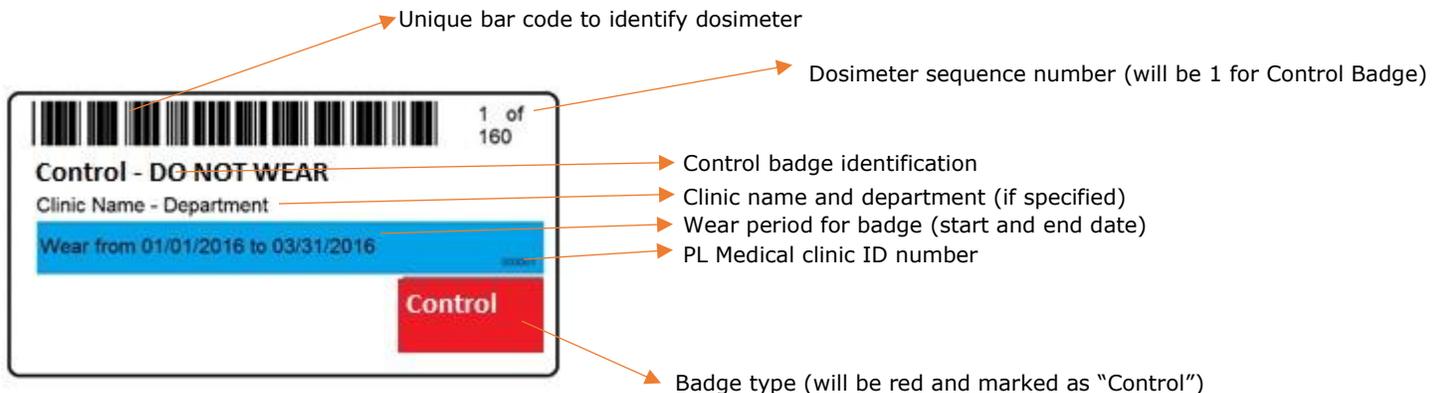

[www.plmedical.com](http://www.plmedical.com)

117 West Dudley Town Road • Bloomfield CT 06002

T (860) 243-2100 • F (860) 243-2101