




PL Medical's dosimetry service is designed to provide valuable dose information for a facilities personnel monitoring program. To obtain accurate data from, it is important to observe to following:

1. The dosimeter should be worn at all times when there is a potential for occupational exposure to ionizing radiation.
2. Dosimeters not in use should be stored in an area without radiation to prevent exposure that is not work-related.
3. The control dosimeter needs to be returned with the rest of the dosimeters assigned in the wear period.
4. Dosimeters should be worn at the body location indicated on the dosimeter label. The dosimeter should never be covered or blocked.
5. In order to accurately assign dose to the individual it is important to only wear the dosimeter with the proper individual's identification. Please let PL Medical know of any staffing changes via the **myTLDaccount** website so we can ensure that you have necessary dosimeters at your location.
6. Replacement dosimeters for the next monitoring period will be sent before the beginning of the next monitoring period. Begin wearing the new set of dosimeters on the wear start date indicated on the dosimeters as well as corresponding paperwork. Return dosimeters from the previous monitoring period along with the control badge in the preaddressed mailing envelope or box. Please remember to apply the appropriate postage on the return shipment to avoid shipping delays.

Badge Label Information

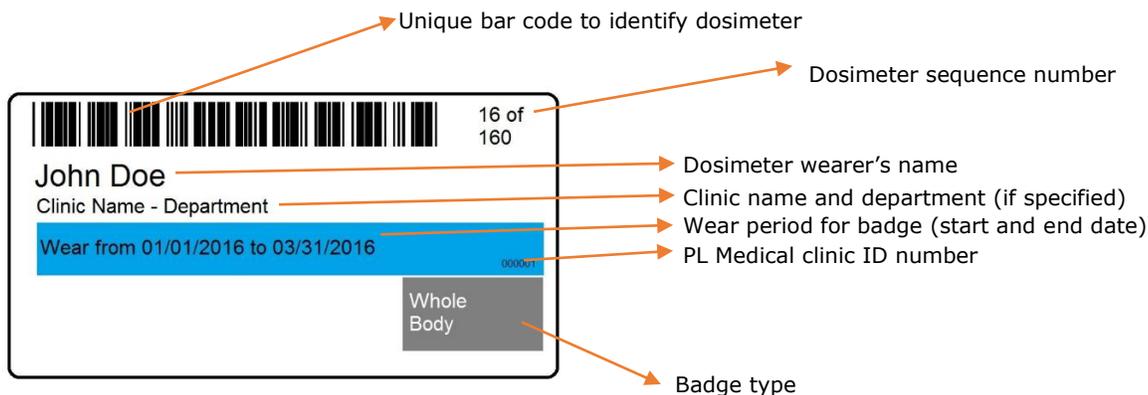

www.plmedical.com

117 West Dudley Town Road • Bloomfield CT 06002

T (860) 243-2100 • F (860) 243-2101